



- 1) Red inner dial should be set at 5
- 2) The green outer dial should be set at 20
- 3) The upper right hand window should read "min"
- 4) The lower right hand window should read "sec"

- Some model timers do not have a 5 and 20 .These settings should read .5 and 2.
- If you used the .5 and 2. Settings above, then the windows should read 10m
- (Upper) and 10s(lower)